 




We track everything™

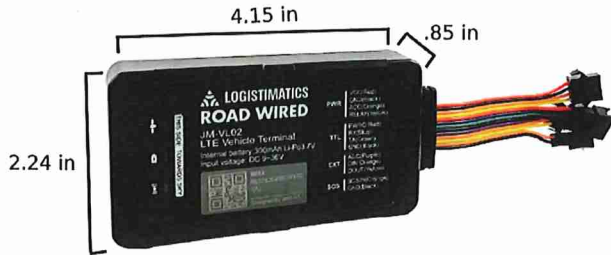

## Road Wired | 4G Hardwired GPS Tracker with Nearly-Universal Coverage

30 DAYS FREE SUBSCRIPTION In stock

Total: \$59.95

-  Free Ground Shipping  
On all orders
-  30 Day Warranty  
And no hassle returns
-  Fantastic Support  
From people who care

- Ideal for tracking vehicles, equipment, or assets.
- Easy 2-wire installation. Simply connect black and red wires and the tracker will start reporting.
- Uses T-Mobile + AT&T networks so it will work almost everywhere.
- Real-time tracking with updates every 400 meters.
- Easy to use tracking from any iOS or Android phone or web browser.
- Trackable throughout the US and internationally where there is 4G LTE-M or 2G cellular coverage.

### A RELIABLE 4G HARDWIRED TRACKER

The Road Wired can be used to track vehicles and equipment with accuracy. It is a reliable, cost-effective solution for tracking vehicles and assets. Easily track employees, cars or assets with our cloud-based apps. The Road Wired can be tracked from a web browser or any iOS or Android device. Get real-time alerts when the tracker leaves a geographic area (a geofence).

# SERVICE GPS TRACKING

GPS tracking service gets your tracker connected to the network and gives you powerful tracking tools in an easy-to-use app.

Getting started with tracking service is easy. Track from your computer or on any iOS or Android device. Instantly locate vehicles, equipment, assets, and people.

Flexible GPS tracking service plans give you security and peace of mind at a low cost. Choose the right service option for you and start tracking the things that matter the most.

Monthly  
Billed each month  
**\$24.95**/month

30-day money back guarantee. 100% satisfaction or your money back.

Billed in advance

## 12 Months Prepaid

Billed in advance at checkout, \$204.95 for 12 months. Save 30% over monthly billing!

- ✓ 30 second location updates (for applicable devices)

Track on any iOS, Android device or web browser

- ✓ Instant location alerts.

Get instant location via SMS or app notification

- ✓ Start tracking immediately.

It works right out of the box

**\$17.08**/month



Tracking service as low as \$14.95/mo

Choose monthly service and cancel anytime, or save a bundle when you purchase service in advance.



Tracking service includes Live Audio

For supported devices only. Additional audio hours can be purchased through the website



30-day money back guarantee

We're sure you're going to love our service and there's a 30-day money back guarantee!

# 1

## BEFORE YOU INSTALL

Consider the optimal location to wire the tracker into your vehicle or equipment. You must have access to a power source. Typical vehicle placement is underneath the dashboard, under a seat, or in the glove box. Avoid under the hood or in the trunk.



# 2

## CONNECT YOUR TRACKER

Wire the PWR interface by connecting the black wire to ground, and the red wire to power. For ignition detection (optional), wire the orange wire to the RUN position of the vehicle's ignition switch. The TTL, EXT, and SOS interfaces are not supported/needed for general use.



# 3

## DOWNLOAD THE TRACKING APP

Download the mobile app from the App Store or Play Store by searching for 'logistimatics'.



# 4

## LOGIN & ACTIVATE

Log into the app with your email address and the password you set up when you purchased your tracker. Next, you will find your tracker in the menu, choose a subscription plan, and activate.



### Add Users

To create additional users for your account, you must do so in the web version of the tracking app: [gps.logistimatics.com](https://gps.logistimatics.com). In the web app, navigate to Account > Manage Users.



### Setting Up Alerts

To be notified if your tracker enters or exits an area, first create a geofence. In the mobile app, click Geofences > New Geofence. Give your new geofence a name, address and size.



### Save Reports

Reports allow you to preserve tracking history in your app. Log into the app and select Reports from the menu. Select a tracker and date range to create a report.



### Troubleshooting

If the tracker does not report location after installation, confirm that the power wire from your vehicle/equipment has power by using a voltmeter.

## Additional Information

### 1 Reporting Frequency

The Road Wired GPS tracker will report it's location every 400 meters when moving by default. There is also an option in the commands section of the app to have the tracker report every 30 seconds when moving.

### 2 Engine Runtime OPTIONAL

 
 
To receive data based on ignition and engine runtime, connect the ORANGE wire to the RUN position of the vehicle's ignition switch. Avoid wiring the red and orange wires together for proper functionality of this feature.

### 3 4G Connectivity


The Road Wired GPS tracker works on 4G cellular networks. Once the device is wired in, it will report location in most parts of the US. The tracker will lose signal if surrounded completely by metal, or inside of a parking garage.

### 4 Historic Locations

You can view the Road Wired's historic locations within the tracking app. In the mobile app, select the CLOCK icon on your tracker's map. For easier viewing, use the web app found at [Logistimatics.com](https://Logistimatics.com) to look back at historic tracking.

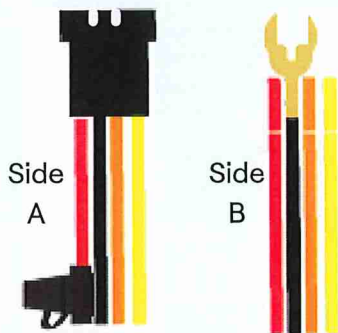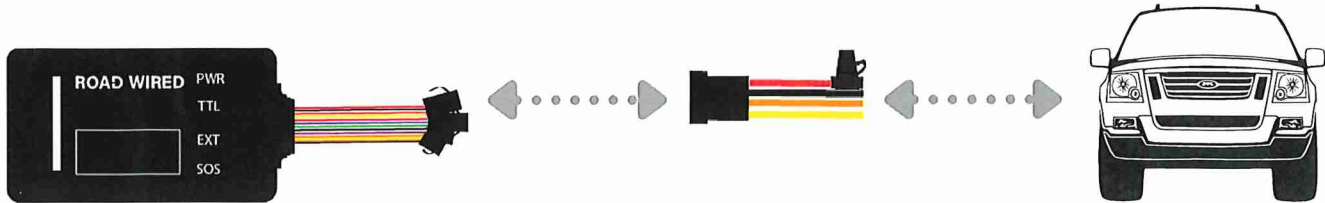

Wiring harness

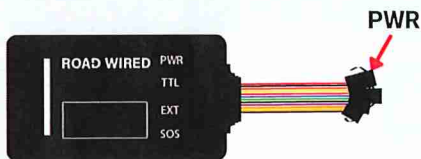 

Road Wired

**POWER**

**GROUND**

**IGNITION RUN**

**(NOT USED)**

PWR interface wires

- 1** Locate the wiring harness and prepare the **red wire** for installation by cutting/stripping away the outer coating of the wire around 1-inch from the end of **side B**.
- 2** **Optional:** Repeat step 1 with the **orange wire** on side B of the wiring harness if you plan to utilize ignition on/off alerts and engine runtime data. Wiring the orange wire is not necessary for general tracking use.
- 3** Locate the **red power wire** coming from your equipment/vehicle that is designated for constant power. Prepare the wire by cutting and stripping 1-inch off from the end of the wire. If you are also wiring the optional **orange wire**, locate the equipment/vehicle's **ignition RUN wire** and strip the end of the wire the same way as the red constant power wire before.
- 4** Connect the prepared **red** (and optional **orange**) wires on the power harness to the prepared power and ignition RUN wires of your equipment/vehicle respectively. Wrap the wire connections with electrical tape to cover and secure. Attach the **black wire** of the wiring harness to a metal ground using the metal clamp end.
- 5** Connect the Road Wired tracker to the wire harness by connecting the attached **black connectors** on each end of the wire sets. Use the top connector on the Road Wired labeled PWR. (*TTL, EXT, and SOS are not used*).

