


Typical Instalation Method

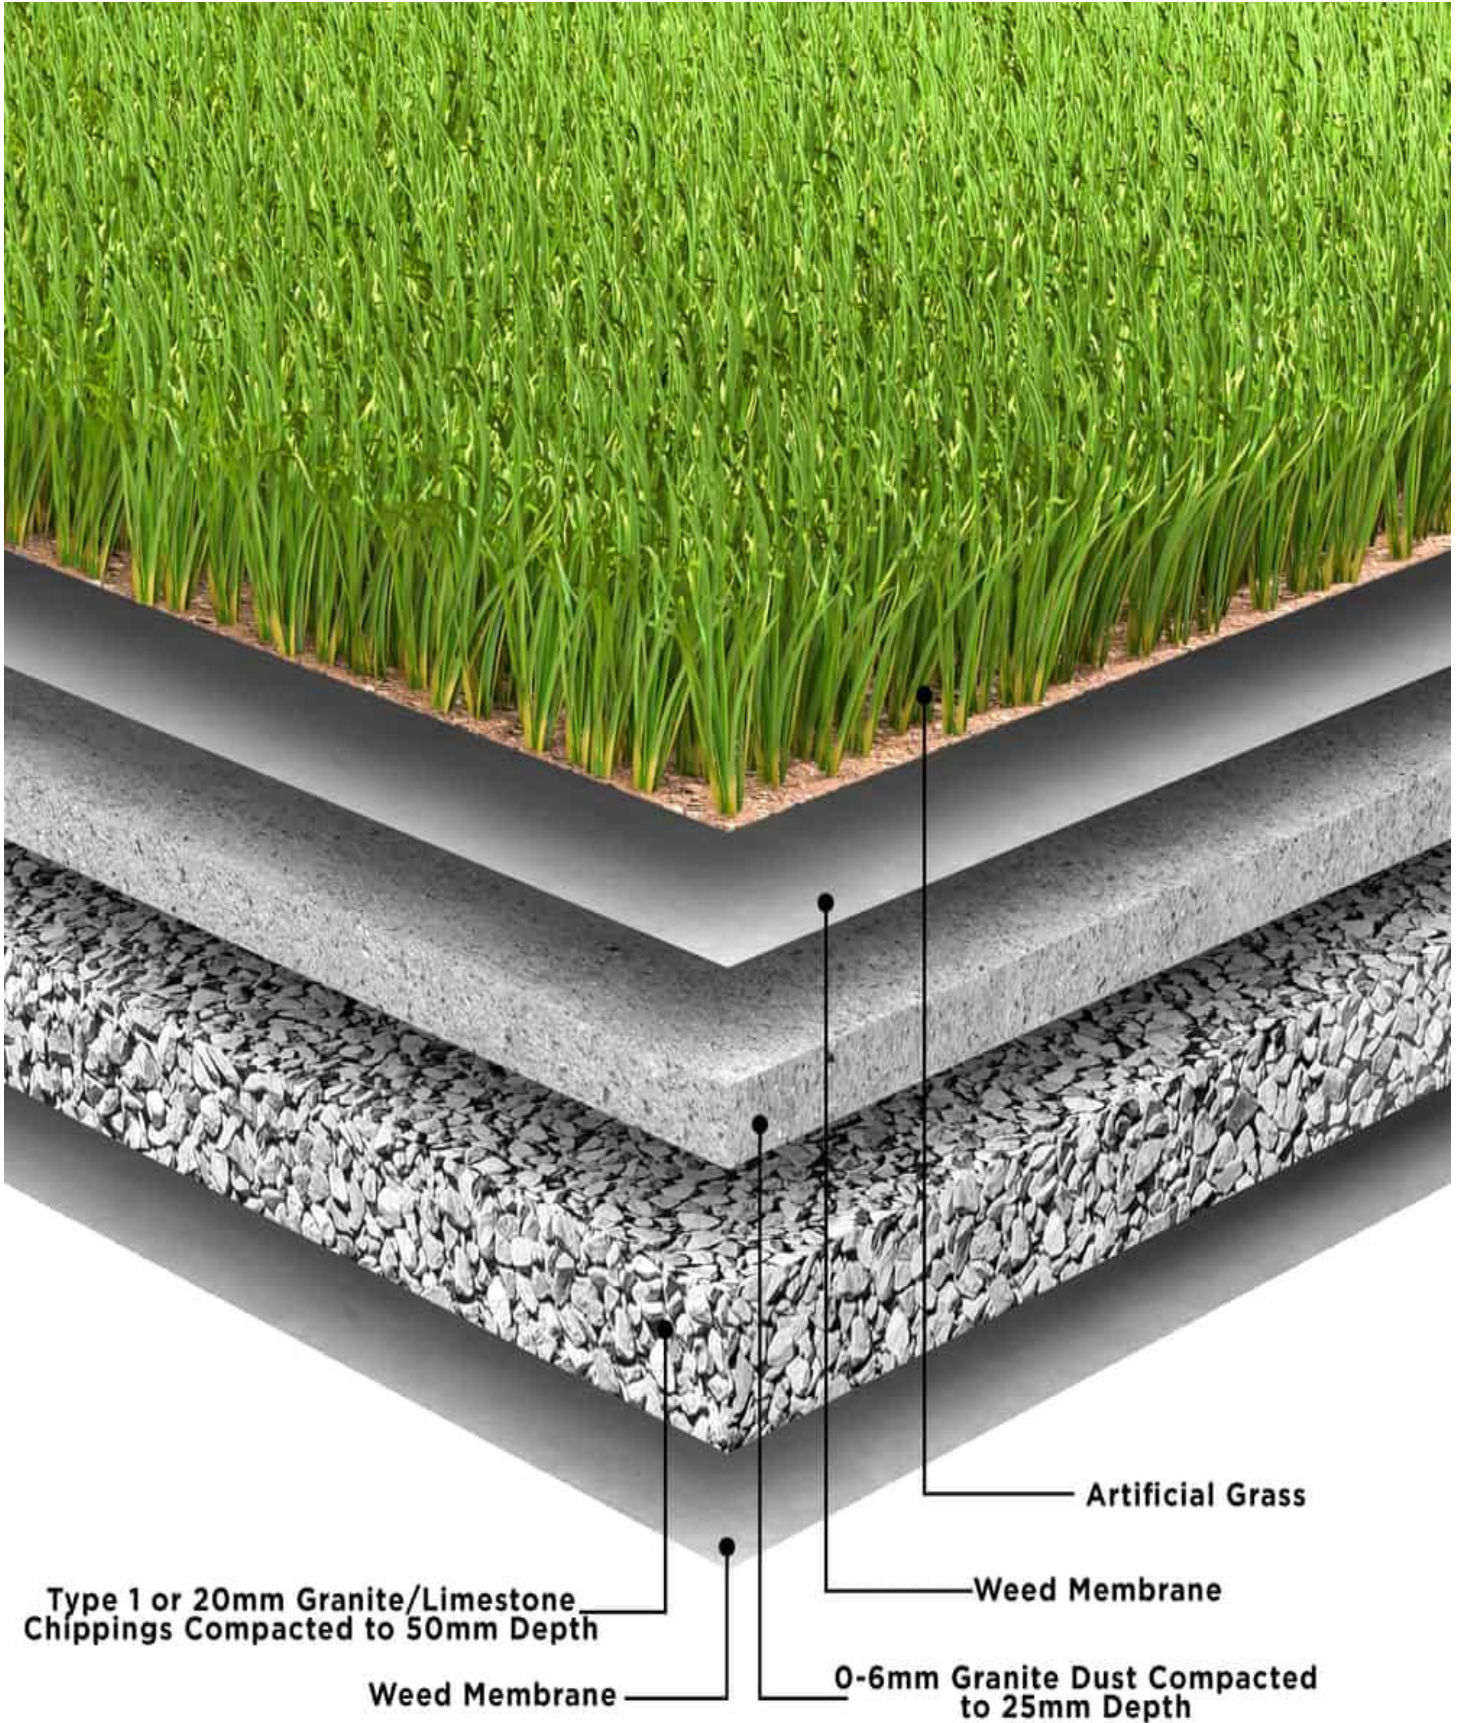

Examples of impervious area borders along side and rear property lines to ensure no water runoff on adjacent properties.



