


DO NOT HEAVILY PRUNE THE TREE AT PLANTING. PRUNE ONLY CROSSOVER LIMBS, CO-DOMINANT LEADERS, AND BROKEN OR DEAD BRANCHES. SOME INTERIOR TWIGS AND LATERAL BRANCHES MAY BE PRUNED; HOWEVER, DO NOT REMOVE THE TERMINAL BUDS OF BRANCHES THAT EXTEND TO THE EDGE OF THE CROWN.

SET TOP OF ROOT BALL AT LEAST 25-50 MM (1-2 IN.) ABOVE GRADE (OR HIGHER IN SLOWLY DRAINING SOILS)

EACH TREE MUST BE PLANTED SUCH THAT THE TRUNK FLARE IS VISIBLE AT THE TOP OF THE ROOT BALL.

50 MM (2 IN.) MULCH. DO NOT PLACE MULCH IN CONTACT WITH TREE TRUNK. MAINTAIN THE MULCH WEED-FREE FOR A MINIMUM OF THREE YEARS AFTER PLANTING.

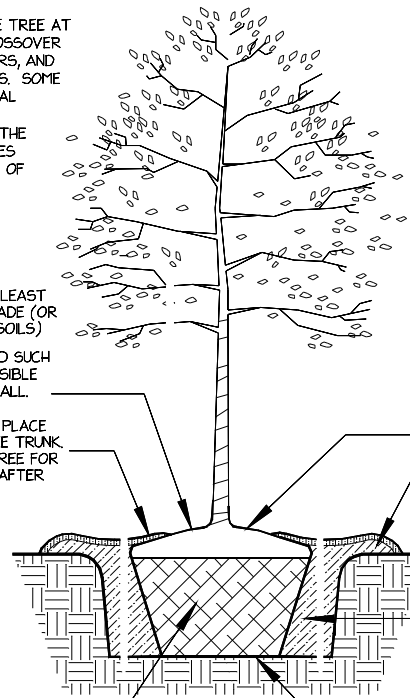

DO NOT COVER THE TOP OF THE ROOT BALL WITH SOIL.

100 MM (4 IN.) HIGH EARTH SAUCER BEYOND EDGE OF ROOT BALL.

TAMP SOIL AROUND ROOT BALL BASE FIRMLY WITH FOOT PRESSURE SO THAT ROOT BALL DOES NOT SHIFT.


REMOVE ALL TWINE, ROPE AND WIRE, AND BURLAP FROM TOP HALF OF ROOT BALL.

IF PLANT IS SHIPPED WITH A WIRE BASKET AROUND THE ROOT BALL, CUT THE WIRE BASKET IN FOUR PLACES AND FOLD DOWN 200 MM (8 IN.) INTO PLANTING HOLE.

PLACE ROOT BALL ON UNEXCAVATED OR TAMPED SOIL.

DECIDUOUS TREE PLANTING DETAIL

TYPICAL INSTALLATION - 3" (75MM) CALIPER OR LESS

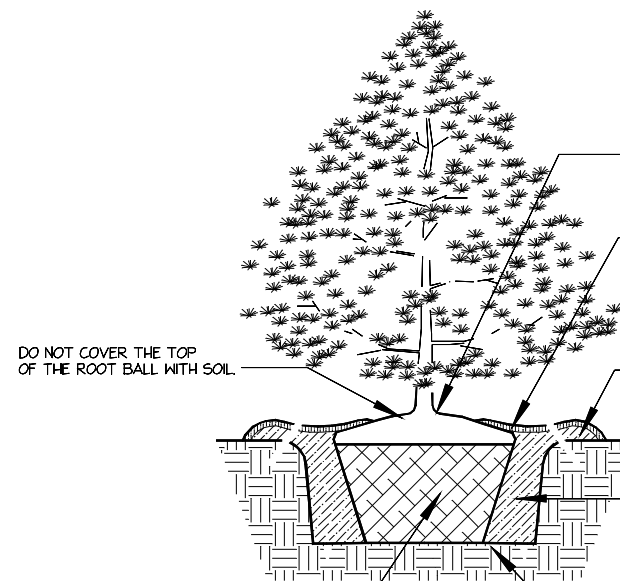

DO NOT COVER THE TOP OF THE ROOT BALL WITH SOIL.

EACH TREE MUST BE PLANTED SUCH THAT THE TRUNK FLARE IS VISIBLE AT THE TOP OF THE ROOT BALL.

50 MM (2 IN.) MULCH. DO NOT PLACE MULCH IN CONTACT WITH TREE TRUNK. MAINTAIN THE MULCH WEED-FREE FOR A MINIMUM OF THREE YEARS AFTER PLANTING.

100 MM (4 IN.) HIGH EARTH SAUCER BEYOND EDGE OF ROOT BALL.

REMOVE ALL TWINE, ROPE AND WIRE, AND BURLAP FROM TOP HALF OF ROOT BALL.

SPECIFIED SOIL MIXTURE FIRMLY COMPACTED TO ELIMINATE AIR POCKETS & SETTLEMENT.

SET TOP OF ROOT BALL AT LEAST 25-50 MM (1-2 IN.) ABOVE GRADE (OR HIGHER IN SLOWLY DRAINING SOILS)

IF PLANT IS SHIPPED WITH A WIRE BASKET AROUND THE ROOT BALL, CUT THE WIRE BASKET IN FOUR PLACES AND FOLD DOWN 200 MM (8 IN.) INTO PLANTING HOLE.

PLACE ROOT BALL ON UNEXCAVATED OR TAMPED SOIL.

CONIFEROUS TREE PLANTING DETAIL

TYPICAL INSTALLATION - 66" (200CM) OR LESS

PLANT HEIGHT SHALL BE MEASURED FROM FINISHED GRADE TO THE UPPER MAIN BODY OF THE PLANT.

SHRUBS PLANTED IN GROUPS SHALL BE SET IN CONTINUOUS BEDS AS SHOWN ON PLAN.


PLANTING METHOD ILLUSTRATED SHALL APPLY EQUALLY TO BARE-ROOT STOCK & BALLED & BURLAP STOCK.

SET SHRUBS 50 MM (2") HIGHER THAN SURROUNDING GRADE TO ALLOW FOR SETTLEMENT.

DO NOT COVER THE TOP OF THE ROOT BALL WITH SOIL.

SCARIFY & IRRIGATE INSIDE OF SHRUB PLANTING PIT PRIOR TO PLANTING.

EXCAVATE & PREPARE PLANTING BED TO 450 MM (18") DEEP OR AS SPECIFIED.

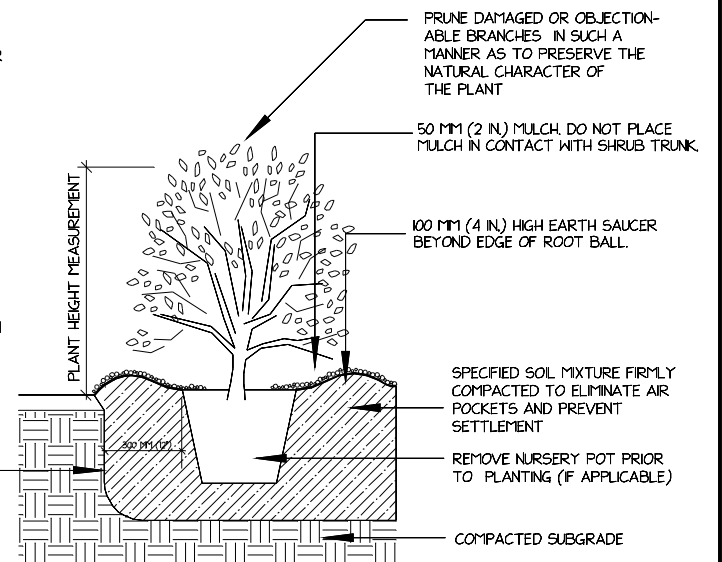

PRUNE DAMAGED OR OBJECTIONABLE BRANCHES IN SUCH A MANNER AS TO PRESERVE THE NATURAL CHARACTER OF THE PLANT.

50 MM (2 IN.) MULCH. DO NOT PLACE MULCH IN CONTACT WITH SHRUB TRUNK.

100 MM (4 IN.) HIGH EARTH SAUCER BEYOND EDGE OF ROOT BALL.

SPECIFIED SOIL MIXTURE FIRMLY COMPACTED TO ELIMINATE AIR POCKETS AND PREVENT SETTLEMENT.

REMOVE NURSERY POT PRIOR TO PLANTING (IF APPLICABLE).

COMPACTED SUBGRADE

SHRUB PLANTING DETAIL

TYPICAL INSTALLATION



Planting Details



Designed By: **MM**
Date Drawn: **4/22/25**