

Not to Scale

COLORADO LICENSED
 DEREK LEE DIPPON
 0051004
 PROFESSIONAL ENGINEER
 8 November 2023

3 ROCKS
ENGINEERING
 719.430.5333
 www.3rockengineering.com
 Cañon City, CO



62 BRITTON TRAIL

DETAILS


Address: 62 BRITTON TRAIL, CUCHARA CO 81055
 Project #: 23.182
 Date: 11/08/2023
 By: AH

SK-1 / 3

p:\2023\23.182-cuchara cabin investigation\h-dwg\structural\62brittontrail.dwg 11/8/2023 4:52:38 PM

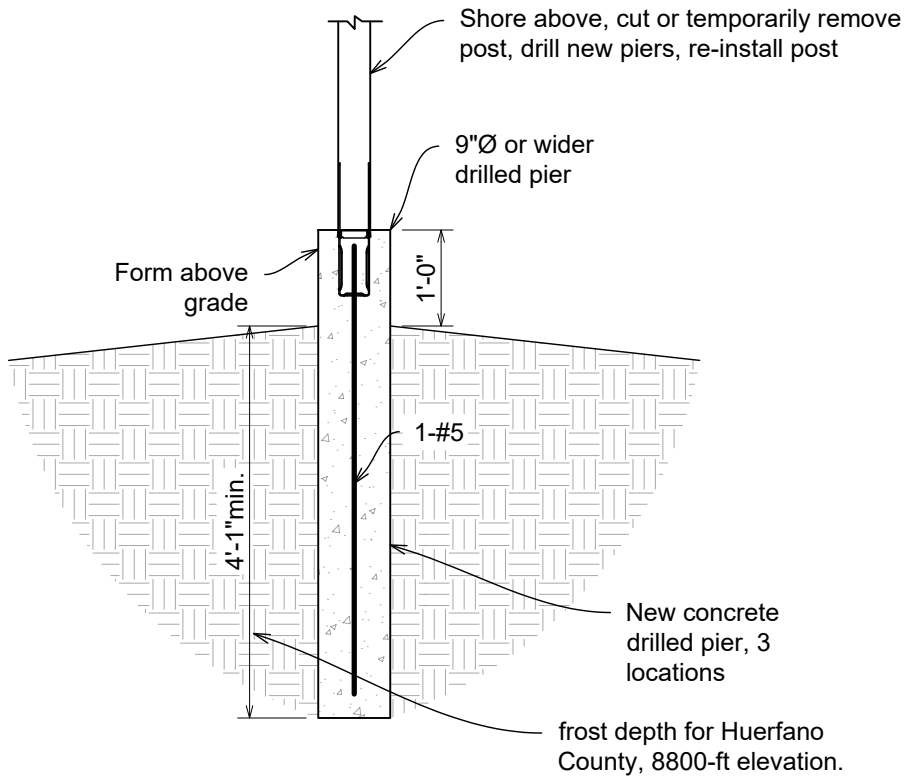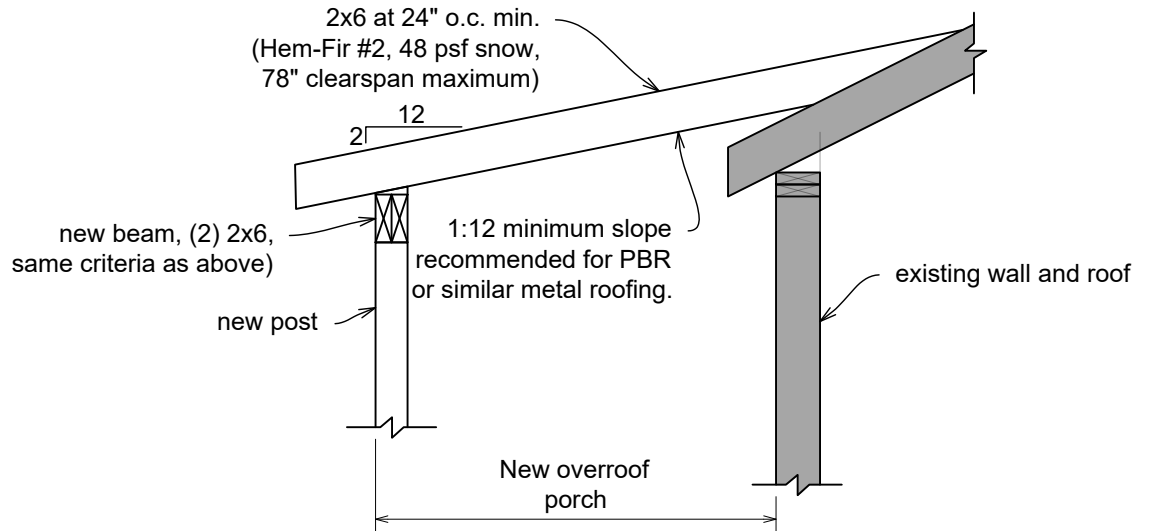

8 November 2023

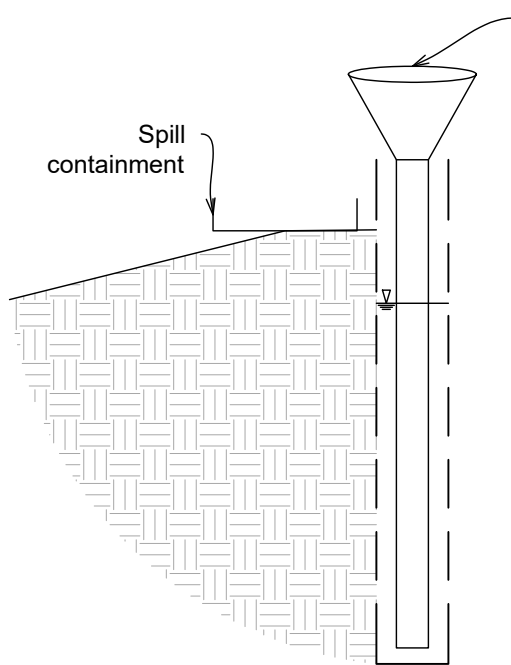

TREMIE METHOD

1. Drill Pier
2. Insert tremie. 16"Ø cone hopper, and 4"Ø x 20ga pipe tremie. (min.)
3. Place bar in tremie
4. Place concrete. Place continuously until water floats out of the top, and "muddy" concrete flows out, until clean concrete of original consistency forces out all water. Contain the spillage, and do not allow waste into stream.
5. Remove tremie. Place post anchor into concrete, and secure until cured.
6. Post may be installed in 3-7 days, after concrete cures to about 70% of $f_c' = 3000$ -psi concrete.

