
# BUILDING DESIGN 3

### 3.8.3 Use traditional detailing

- Treat openings in walls as though they were constructed of the traditional material for the style. For example, be sure to provide substantial wall space above arches in stucco and stone walls. Traditionally, wall space above the arch would have been necessary to structurally span the opening, and to make the space too small is inconsistent with the architectural style.
- Openings in walls faced with stone, real or synthetic, should have defined lintels above the opening except in Mission or Spanish Eclectic styles. Lintels may be stone, brick or wood as suits the style of the house.
- Treat synthetic materials as though they were authentic.
   For example, select synthetic stone patterns that place the individual stones in a horizontal plane as they would have been in a load bearing masonry wall.
- Select roof materials that are consistent with the traditional architectural style (e.g., avoid concrete roof tiles on a Craftsman Style house.)

### 3.8.4 Materials changes

• Make materials and color changes at inside corners rather than outside corners to avoid a pasted on look.

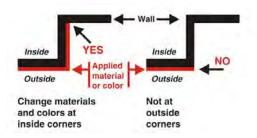

# Stone Lintels



Use stone or wood lintels over openings in stone walls

## 3.9 ADDITIONS/ACCESSORY BUILDINGS/SECONDARY UNITS

- Site additions in the least conspicuous place. In many cases this is a rear or side elevation only rarely is it a rooftop.
- The existing built forms, components and materials should be reinforced. Heights and proportions of additions and alterations should be consistent with and continue the original architectural style and design.
- Additions should be subordinate, and compatible in scale and proportion to the historically significant portions of the existing structure.
- When an addition or remodel requires the use of newly constructed exterior elements, they should be identical in size, dimension, shape and location as the original, and



Additions, accessory buildings and secondary units should match the form, architectural style, and details of the original house

## BUILDING DESIGN 3



Original structure



Addition incorporated into the roof successfully adds space while respecting the integrity of the existing house and the scale of the neighborhood



Placing a two story addition to the rear can minimize its impact on the historic resource and the scale of the neighborhood

- should utilize the same materials as the existing protected exterior elements.
- When an addition necessitates the removal of architectural materials, such as siding, windows, doors, and decorative elements, they should be carefully removed and reused in the addition where possible.
- The introduction of window and door openings not characteristic in proportion, scale, or style with the original architecture is strongly discouraged (e.g., sliding windows or doors in a structure characterized by double hung windows and swinging doors).
- The character of any addition or alteration should be in keeping with and subordinate to the integrity of the original structure.
- The amount of foundation exposed on the addition should match that of the original building.
- Do not add roof top additions where the roof is of historic significance.
- Second floor additions are discouraged in neighborhoods with largely one story homes. If horizontal expansion of the house is not possible, consider incorporating a second floor addition within the roof form as shown in the example to the left.
- Second floor additions which are not embedded within the roof form should be located to the rear of the structure.
- The height and proportion of an addition or a second story should not dominate the original structure.
- Deck additions should be placed to the rear of the structure only, and should be subordinate in terms of scale and detailing.
- New outbuildings, such as garages, should be clearly subordinate to the main structure in massing, and should utilize forms, materials and details which are similar to the main structure.
- Garages should generally be located to the rear of the lot behind the rear wall of the residence. One car wide access driveways should be utilized.